


# Spotrebné diely pre ručný horák T100

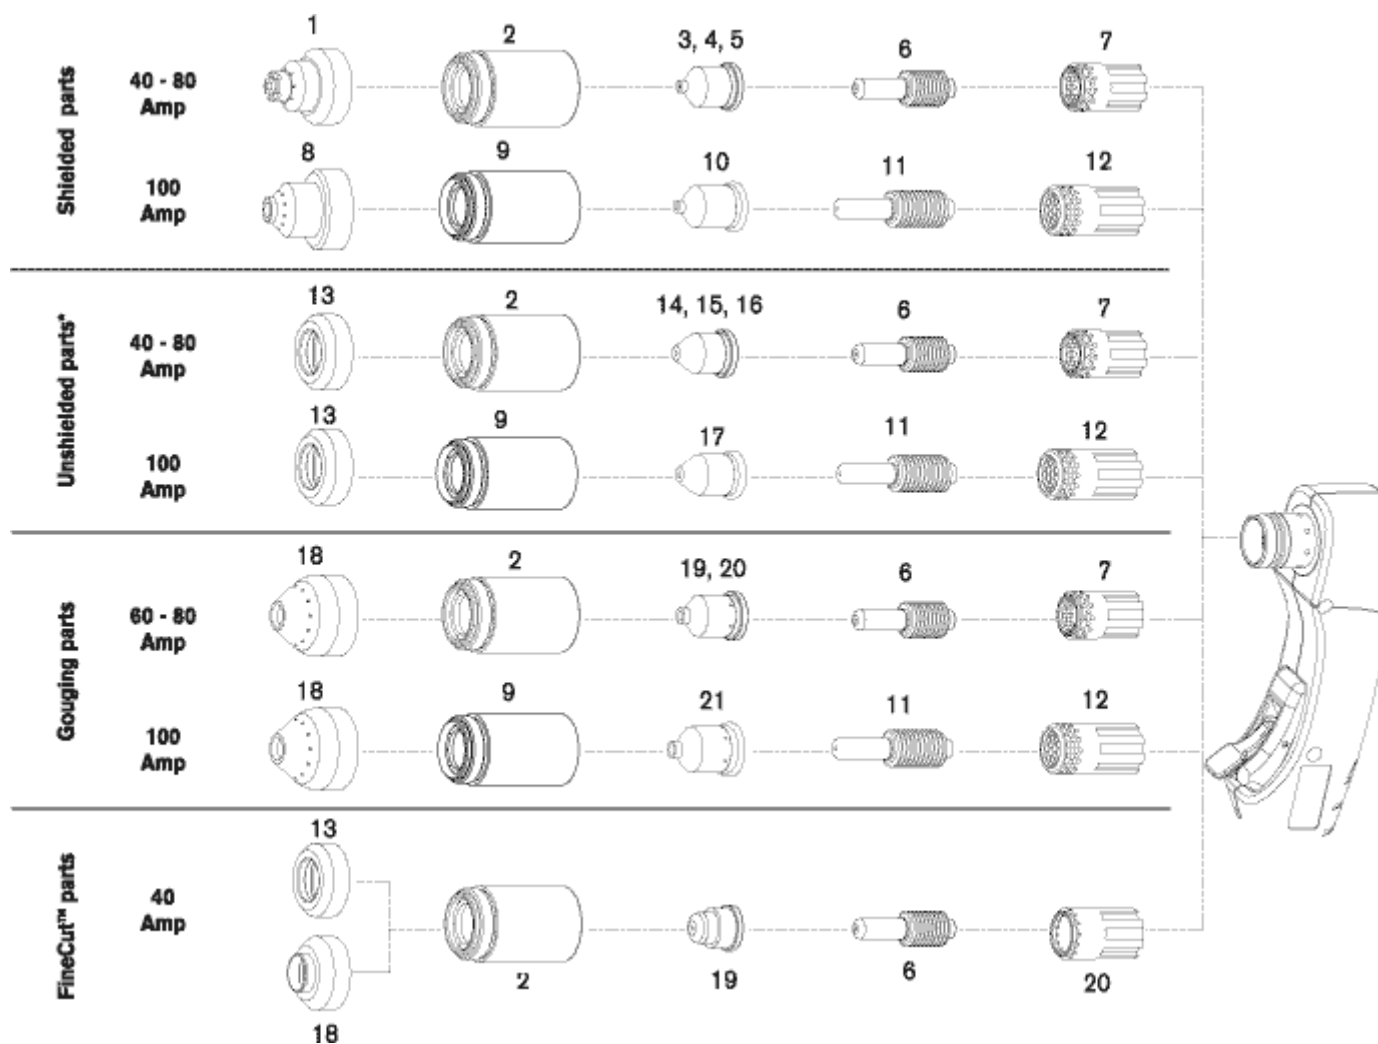

	DESCRIPTION	100 AMP		80 AMP		60 AMP		40 AMP		QUANTITY PER PACKAGE
		ITEM NUMBER	PART NUMBER	ITEM NUMBER	PART NUMBER	ITEM NUMBER	PART NUMBER	ITEM NUMBER	PART NUMBER	
Shielded parts	Shield	8	220065	1	120929	1	120929	1	120929	1
	Retaining Cap	9	220048	2	120928	2	120928	2	120928	1
	Nozzle	10	220011	5	120927	4	120931	3	120932	5
	Electrode	11	220037	6	120926	6	120926	6	120926	5
	Swirl Ring	12	220051	7	120925	7	120925	7	120925	1
Unshielded parts*	Deflector	13	120979	13	120979	13	120979	13	120979	1
	Retaining Cap	9	220048	2	120928	2	120928	2	120928	1
	Nozzle	17	220064	16	120980	15	220007	14	220006	5
	Electrode	11	220037	6	120926	6	120926	6	120926	5
	Swirl Ring	12	220051	7	120925	7	120925	7	120925	1
Gouging parts	Shield	18	120977	18	120977	18	120977	—	—	1
	Retaining Cap	9	220048	2	120928	2	120928	—	—	1
	Nozzle	21	220063	20	220059	19	220059	—	—	5
	Electrode	11	220037	6	120926	6	120926	—	—	5
	Swirl Ring	12	220051	7	120925	7	120925	—	—	1
FineCut parts	Deflector	—	—	—	—	—	—	13	120979	1
	Deflector, CE	—	—	—	—	—	—	18	220325	1
	Retaining Cap	—	—	—	—	—	—	2	120928	1
	Nozzle	—	—	—	—	—	—	19	220329	5
	Electrode	—	—	—	—	—	—	6	120926	5
Swirl Ring	—	—	—	—	—	—	20	220327	1	